





# UGT Veil Safe Installation

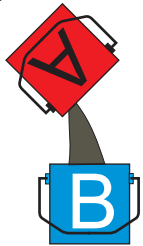

Step 1


Prior to mixing Veil Safe, make sure the access around the perimeter of the manhole is clear.

Using protective gloves and safety goggles; open Veil-Safe, cans A and B. Pour A into can B.

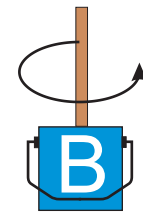


Step 2

Mix UGT Veil-Safe. When using automated equipment, make sure the setting is at low speed. Mixing at high RPM's will aerate the mixture and create pin holing or bubbles.

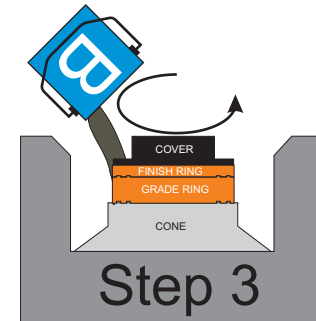


Step 3

Pour mixture around the top edge of frame. Let mixture drip down sides of chimney structure.

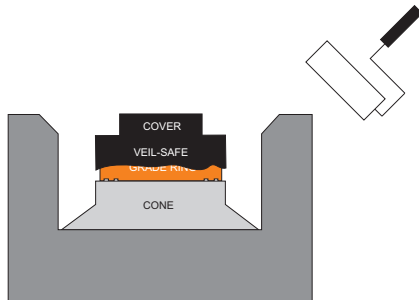

Step 4

Roll and spread mixture around chimney structure overlapping the cone.

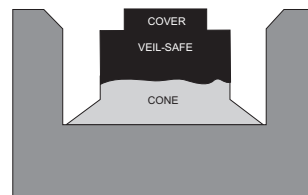

Step 5

Check and fix non-covered areas. Back fill in 1 hour from the start of step 1.

## APPLICATION DIRECTION

Keep material in a cool, shaded area during hot weather and do not let A side go below 60 deg. F for long period of time.

Do not let material freeze.



Upon mixing, user will feel bottom of container getting warm. This indicates the veil is ready to apply. If user waits too long, more rolling/painting effort will be required.

Veil Safe will start becoming tack free in about 10-15 minutes. Back fill can take place in about one hour.

