


GROUT N PATCH

STORE ABOVE 60°F




STEP 1

Using protective gloves and safety goggles, Open H2S Safe A and B, and pour into provided 5 gal. pail. Stir mixture until color is consistent.

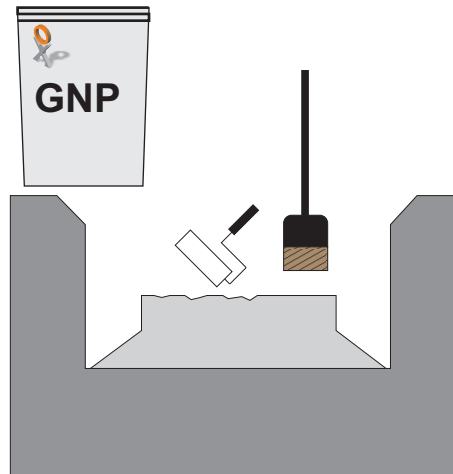

STEP 2

Wire brush and broom top of structure or substrate to be repaired. Using solution from step 2, use roller or brush to apply to the surface as a liquid. This will act as its own primer.

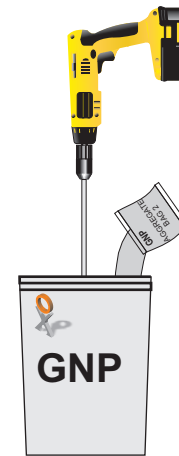


STEP 3

With a jiffy mixture and drill, pour small bag of aggregate into remaining solution and mix contents.




STEP 4

Add large bag and continue to mix for about 5 minutes and even consistency.

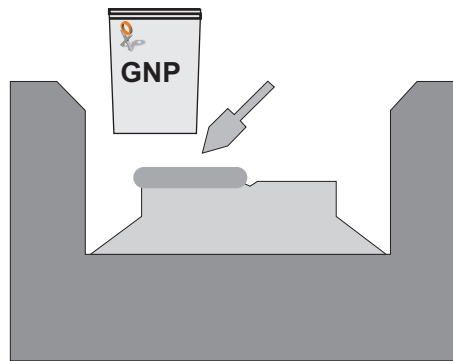

STEP 5

Trowel on Grout n Patch with a thick layer.

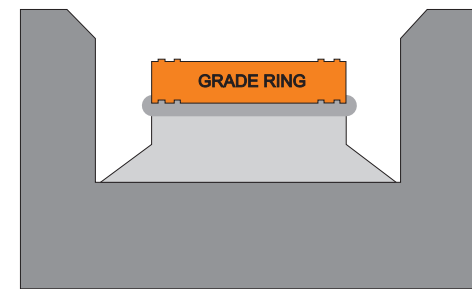

STEP 6

Install first UGT Grade Ring into the Grout n Patch mud. Press down firmly and let structure dry.



Made in the USA

Underground Technologies

Developing Underground Solutions for the 21st Century

(248)588-4050 - WWW.UGROUNDTech.COM

FOR CHEMICAL EMERGENCY

Spill, Leak, Fire, Exposure, or Accident
Call CHEMTREC Day or Night
Within USA and Canada 1-800-424-9300
Outside USA and Canada: +1 703-527-3887
(collect calls accepted)