
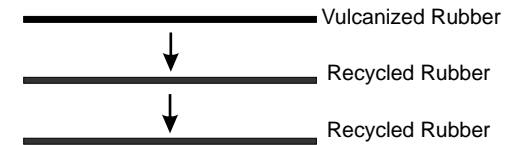
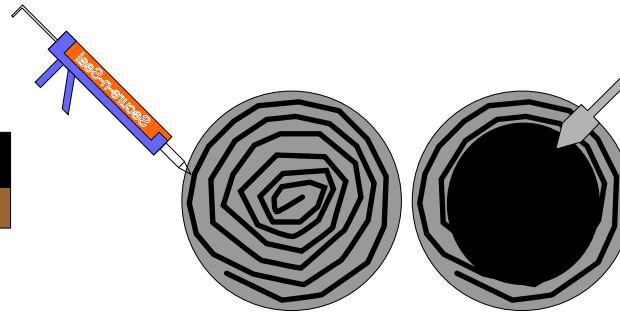



ROAD SMOOTHIE INSTALLATION

STORE ABOVE 60°F

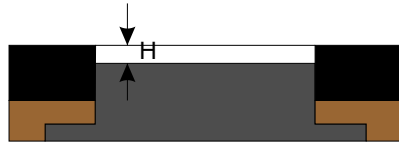

STEP 1

Measure the drop height of the road surface to the cover. The height that should be filled is $H - .25''$ to allow for snow and grater blade clearance. Then determine the number of layers required. The top neoprene layer $(.25'') + n \times (.25'')$

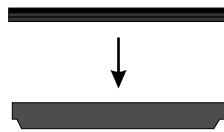


STEP 4

Clean top of manhole cover of all dirt debris and free of any chemical agent. Perform step 2 on the bottom of sub-assembly created in step 3. Press together, making sure that the edges are well sealed. Excess Secure n Seal should be oozing out of the perimeter. After 10 minutes, attempt to peel back edges and fix

STEP 2

Adhere each layer or recycled rubber using Secure n Seal as shown in the pictorial above. Apply the Secure n Seal and then trowel or smooth flat. Only apply Secure n Seal between layers.

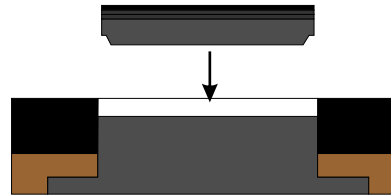

STEP 5

Install cover assembly from step 4 and repress by walking on the cover.

STEP 3

Press each layer together, making sure that the edges are well sealed. Excess Secure n Seal should be oozing out of the perimeter. After 10 minutes, attempt to peel back edges and fix where needed.



STEP 6

Make sure height of assembly is not above the surface of the road.



Made in the USA

Underground Technologies

Developing Underground Solutions for the 21st Century

(248)588-4050 - WWW.UGROUNDTech.COM



FOR CHEMICAL EMERGENCY

Spill, Leak, Fire, Exposure, or Accident
Call CHEMTREC Day or Night
Within USA and Canada 1-800-424-9300
Outside USA and Canada: +1 703-527-3887
(collect calls accepted)